

PROMO 4006

PROGRAMMER 4 x 4 A ref. 497

PROGRAM SELECTION

N°	FUNCTION	PROGRAM
0	Manual dimmer 1+2+3+4	Manual adjustment of lighting
1	Automatic dimmer 1+2+3+4 0 to 100 %	Max. level and speed adjustable
2	Cross-fade 1+2 / 3+4 0 to 100 %	Cross-fader 2 channels
3	Cross-fade 1 / 3	1 on - 2 off
4	Cross-fade 1 / 4	1 on - 3 off
5	Dimmed curtain 3 channels	1 / 1+2 / 1+2+3
6	Dimmed curtain 4 channels	1 / 1+2 / 1+2+3 / 1+2+3+4
7	Cross-fade 2 / 3	2 on - 1 off
8	Cross-fade 2 / 4	2 on - 2 off
9	Automatic dimmer 30 to 100 %	As program 1 from 30 to 100 %
A	Automatic dimmer 30 to 100 %	As program 2 from 30 to 100 %
B	Positive chaser	1 on - 3 off
C	Negative chaser	1 off - 3 on
D	Dimmed curtain 4 channels + flash	As program 6 + flash
E	Automatic dimmer 0 à 100 % + flash	As program 1 + flash
F	Logo 4 dimmed channels	

03.00