

SELECTION DES PROGRAMMES programmes simples 1 à 32

N°	ANIMATION	1	2	3	4	5	6
01	CLIGNOTEUR SIMPLE (1+2+3+4+5+6)	ON	ON	ON	ON	ON	ON
02	CLIGNOTEUR SIMPLE (1+2+3+4+5+6) LENT	OFF	ON	ON	ON	ON	ON
03	CLIGNOTEUR INVERSEUR (1+2+3) (4+5+6)	ON	OFF	ON	ON	ON	ON
04	CLIGNOTEUR INVERSEUR (1+2+3) (4+5+6) LENT	OFF	OFF	ON	ON	ON	ON
05	CHEF D'ORCHESTRE (1+2+3) (4+5+6)	ON	ON	OFF	ON	ON	ON
06	CHENILLARD POSITIF 6 VOIES	OFF	ON	OFF	ON	ON	ON
07	CHENILLARD POSITIF 5 VOIES	ON	OFF	OFF	ON	ON	ON
08	CHENILLARD POSITIF 6 VOIES 2 SENS	OFF	OFF	OFF	ON	ON	ON
09	CHENILLARD POSITIF 5 VOIES 2 SENS	ON	ON	ON	OFF	ON	ON
10	CHENILLARD POSITIF + CLIGNOTANT 6 VOIES	OFF	ON	ON	OFF	ON	ON
11	CHENILLARD POSITIF + CLIGNOTANT 5 VOIES	ON	OFF	ON	OFF	ON	ON
12	CHENILLARD NEGATIF 6 VOIES	OFF	OFF	ON	OFF	ON	ON
13	CHENILLARD NEGATIF 5 VOIES	ON	ON	OFF	OFF	ON	ON
14	CHENILLARD NEGATIF 6 VOIES 2 SENS	OFF	ON	OFF	OFF	ON	ON
15	CHENILLARD NEGATIF 5 VOIES 2 SENS	ON	OFF	OFF	OFF	ON	ON
16	CHENILLARD NEGATIF + CLIGNOTANT 6 VOIES	OFF	OFF	OFF	OFF	ON	ON
17	CHENILLARD NEGATIF + CLIGNOTANT 5 VOIES	ON	ON	ON	ON	OFF	ON
18	CHENILLARD MIXTE 6 VOIES	OFF	ON	ON	ON	OFF	ON
19	CHENILLARD MIXTE 5 VOIES	ON	OFF	ON	ON	OFF	ON
20	RIDEAU TYPE A 6 VOIES	OFF	OFF	ON	ON	OFF	ON
21	RIDEAU TYPE A 5 VOIES	ON	ON	OFF	ON	OFF	ON
22	RIDEAU TYPE B 6 VOIES	OFF	ON	OFF	ON	OFF	ON
23	RIDEAU TYPE B 5 VOIES	ON	OFF	OFF	ON	OFF	ON
24	RIDEAU TYPE A + CLIGNOTANT 6 VOIES	OFF	OFF	OFF	ON	OFF	ON
25	RIDEAU TYPE A + CLIGNOTANT 5 VOIES	ON	ON	ON	OFF	OFF	ON
26	RIDEAU CLIGNOTANT 6 VOIES	OFF	ON	ON	OFF	OFF	ON
27	RIDEAU CLIGNOTANT 5 VOIES	ON	OFF	ON	OFF	OFF	ON
28	EMPILAGE 6 VOIES	OFF	OFF	ON	OFF	OFF	ON
29	EMPILAGE 5 VOIES	ON	ON	OFF	OFF	OFF	ON
30	EMPILAGE + CLIGNOTANT 6 VOIES	OFF	ON	OFF	OFF	OFF	ON
31	EMPILAGE + CLIGNOTANT 5 VOIES	ON	OFF	OFF	OFF	OFF	ON
32	RESERVE PROGRAMME SPECIAL	OFF	OFF	OFF	OFF	OFF	ON

05.05

Mise en fixe : par contact à fermeture à placer à l'extérieur

**SELECTION DES PROGRAMMES
programmes complexes 33 à 64**

N°	ANIMATION	1	2	3	4	5	6
33	CROIX - LOGO N° 1 6 VOIES	ON	ON	ON	ON	ON	OFF
34	CROIX - LOGO N° 1 5 VOIES	OFF	ON	ON	ON	ON	OFF
35	CROIX - LOGO N° 2 6 VOIES	ON	OFF	ON	ON	ON	OFF
36	CROIX - LOGO N° 2 5 VOIES	OFF	OFF	ON	ON	ON	OFF
37	CROIX - LOGO N° 3 6 VOIES	ON	ON	OFF	ON	ON	OFF
38	CROIX - LOGO N° 3 5 VOIES	OFF	ON	OFF	ON	ON	OFF
39	CROIX - LOGO N° 4 6 VOIES	ON	OFF	OFF	ON	ON	OFF
40	CROIX - LOGO N° 4 5 VOIES	OFF	OFF	OFF	ON	ON	OFF
41	CROIX - LOGO N° 5 6 VOIES	ON	ON	ON	OFF	ON	OFF
42	CROIX - LOGO N° 5 5 VOIES	OFF	ON	ON	OFF	ON	OFF
43	CROIX - LOGO N° 6 6 VOIES	ON	OFF	ON	OFF	ON	OFF
44	CROIX - LOGO N° 6 5 VOIES	OFF	OFF	ON	OFF	ON	OFF
45	CROIX - LOGO N° 7 6 VOIES	ON	ON	OFF	OFF	ON	OFF
46	CROIX - LOGO N° 7 5 VOIES	OFF	ON	OFF	OFF	ON	OFF
47	CROIX - LOGO N° 3 6 VOIES SANS FLASH	ON	OFF	OFF	OFF	ON	OFF
48	CROIX - LOGO N° 3 5 VOIES SANS FLASH	OFF	OFF	OFF	OFF	ON	OFF
49	ENCHAINEMENT PROGRAMMES 33 + 35 6 VOIES	ON	ON	ON	ON	OFF	OFF
50	ENCHAINEMENT PROGRAMMES 37 + 39 6 VOIES	OFF	ON	ON	ON	OFF	OFF
51	ENCHAINEMENT PROGRAMMES 34 + 36 5 VOIES	ON	OFF	ON	ON	OFF	OFF
52	ENCHAINEMENT PROGRAMMES 38 + 40 5 VOIES	OFF	OFF	ON	ON	OFF	OFF
53	ENCHAINEMENT PROGRAMMES 8+1+3+1 6 VOIES	ON	ON	OFF	ON	OFF	OFF
54	ENCHAINEMENT PROGRAMMES 14+1+3+1 6 VOIES	OFF	ON	OFF	ON	OFF	OFF
55	ENCHAINEMENT PROGRAMMES 20+22+1 6 VOIES	ON	OFF	OFF	ON	OFF	OFF
56	ENCHAINEMENT PROGRAMMES 8+14 6 VOIES	OFF	OFF	OFF	ON	OFF	OFF
57	ENCHAINEMENT PROGRAMMES 9+1+3+1 5 VOIES	ON	ON	ON	OFF	OFF	OFF
58	ENCHAINEMENT PROGRAMMES 15+1+3+1 5 VOIES	OFF	ON	ON	OFF	OFF	OFF
59	ENCHAINEMENT PROGRAMMES 21+23+1 5 VOIES	ON	OFF	ON	OFF	OFF	OFF
60	ENCHAINEMENT PROGRAMMES 9+15 5 VOIES	OFF	OFF	ON	OFF	OFF	OFF
61	RESERVE PROGRAMME SPECIAL	ON	ON	OFF	OFF	OFF	OFF
62	RESERVE PROGRAMME SPECIAL	OFF	ON	OFF	OFF	OFF	OFF
63	RESERVE PROGRAMME SPECIAL	ON	OFF	OFF	OFF	OFF	OFF
64	RESERVE PROGRAMME SPECIAL	OFF	OFF	OFF	OFF	OFF	OFF

Mise en fixe : par contact à fermeture à placer à l'extérieur

PROMOTION ELECTRONIQUE zi les carreaux 77440 Lizy-sur-Ourcq France

tél. 01 60 61 53 00 fax 01 60 61 22 24

www.promoelec.com e-mail : contact@promoelec.com